


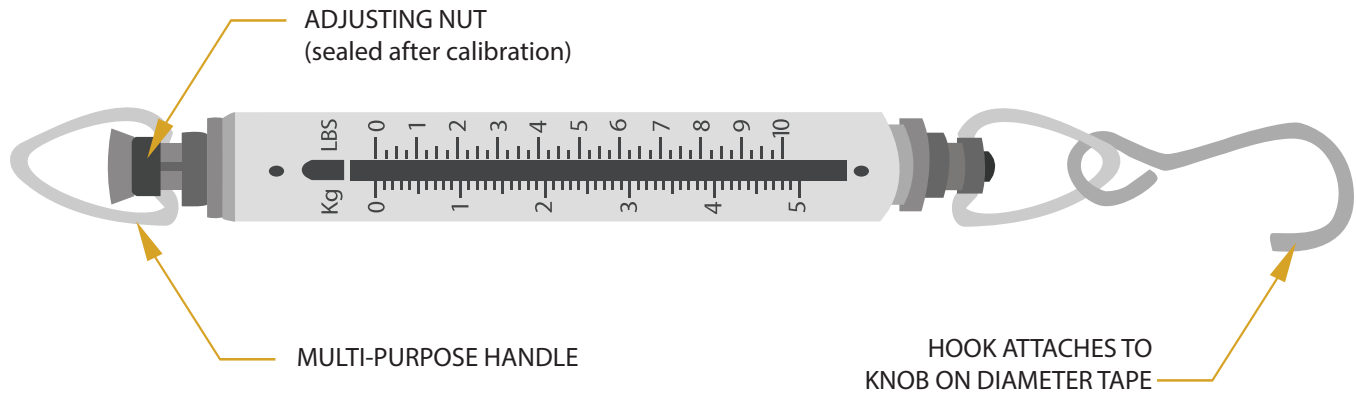

0-10 POUND TENSION SCALE



Instructions for use:

To use tensioner, attach hook to the knob of Pi Tape® measurement tape.

Position tape around object to be measured.

Use tensioner as an extension of the knob; applying force by pulling the multi-purpose handle.

Check scale of tensioner until 5 pounds tension is achieved.

Tension Scale tolerance: $\pm .25$ of a pound